


## MEET YOUR FIRE HD 10

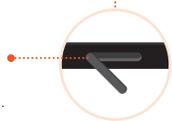

**microSD SLOT**  
Install microSD for up to 1TB of additional storage.  
*microSD card sold separately.*




**Also included:** USB-C cable, power adaptor.

### BACK




### SIDE

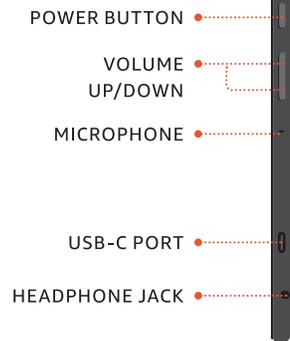

## ACTIVATE YOUR FIRE HD 10

- 1 POWER**  
Turn on your tablet.
- 2 SETUP**  
Follow the on-screen instructions to complete setup.

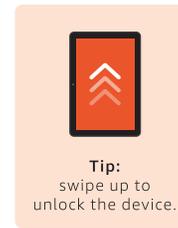

**Tip:**  
swipe up to unlock the device.

### NAVIGATE FROM HOME SCREEN

- ◀ Go back
- Home screen
- Switch between apps

## EXPLORE YOUR FIRE HD 10

### TO ACCESS SETTINGS AND SHORTCUTS



**Swipe down** for settings and quick controls.  
**Swipe left** for libraries.  
**Swipe right** for books, TV programmes, films, games and other content.

### CHARGE YOUR FIRE HD 10



For troubleshooting tips and Amazon Customer Service, visit [www.amazon.com/devicesupport](http://www.amazon.com/devicesupport).