



## MEET YOUR FIRE HD 10 KIDS PRO

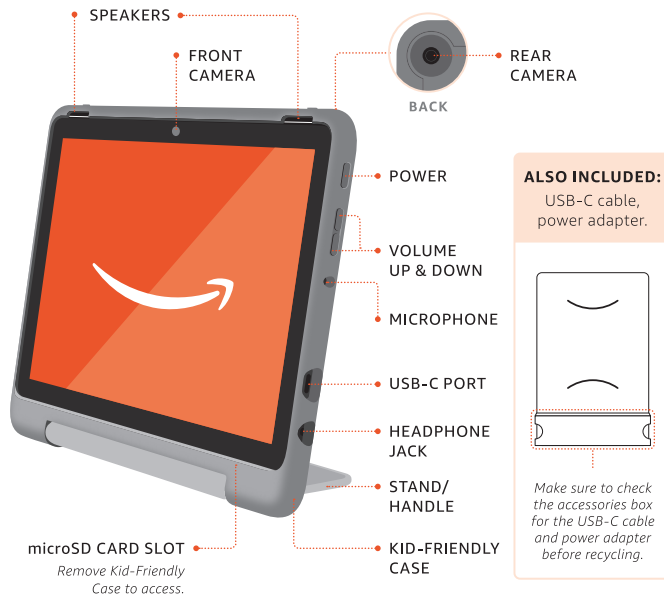

## ACTIVATE YOUR FIRE HD 10 KIDS PRO



## EXPLORE YOUR FIRE HD 10 KIDS PRO

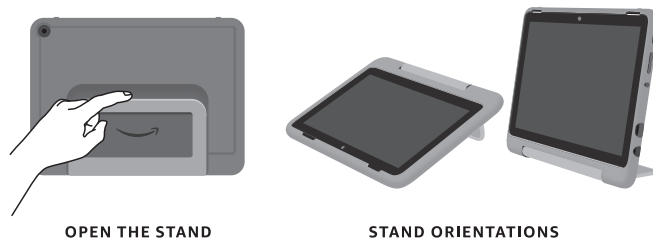

### NAVIGATION



**SWIPE UP**  
to unlock.



**SWIPE DOWN**  
for settings.




◀ Go back

● Return home

■ Switch between apps

## REMOVE THE CASE IF NEEDED

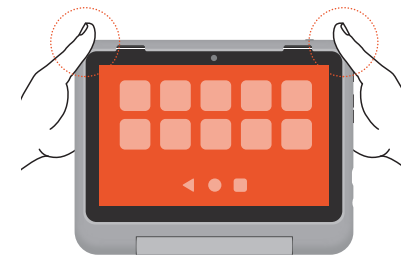

### CLEAN YOUR TABLET

Remove the case and clean with a dry, nonabrasive cloth.



### EXPAND YOUR STORAGE

Remove the case to install a microSD card.  
*microSD card sold separately.*

### REINSERT THE TABLET

