

MEET YOUR FIRE HD 8 KIDS



ACTIVATE YOUR FIRE HD 8 KIDS



1 POWER

Power on your tablet.

2 PARENT SETUP

Follow the on-screen instructions to complete setup. Set your password or PIN to access adult profile and other settings.


3 CREATE CHILD PROFILE

Follow prompts to activate the included 1-year subscription to Amazon Kids+ by completing your child profile.



Access and set up all parental controls on the **Amazon Parent Dashboard** by scanning the QR code or visiting <https://parents.amazon.co.uk>

ENJOY YOUR FIRE HD 8 KIDS

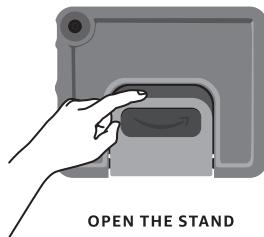

OPEN THE STAND



STAND ORIENTATIONS

NAVIGATION




SWIPE UP
to unlock.




SWIPE DOWN
for settings.

- ◀ Go back
- Return home
- Switch between apps

REMOVE THE CASE IF NEEDED

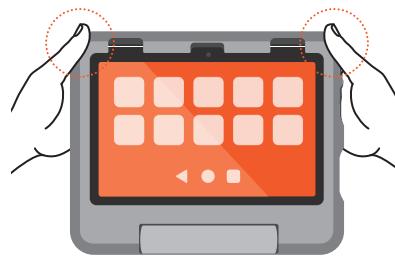


PUSH OFF UPPER CORNERS
TO REMOVE THE CASE

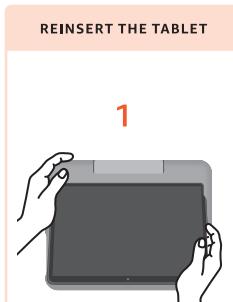

REINSERT THE TABLET

1

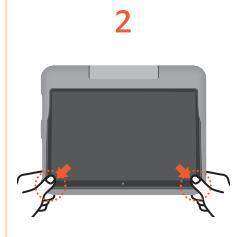

2

CLEAN YOUR TABLET

Remove the case and clean with a dry, non-abrasive cloth.



EXPAND YOUR STORAGE

Remove the case to install a microSD card.
microSD card sold separately.

