



Wireless Keyboard for Fire HD 10 with Detachable Case

User Manual



Installation and Removal

Install your device:

- a. Press the bottom half of your device into the case and apply light pressure to snap it into place.
- b. Then press the top half of your device into the case and check each corner to make sure your device is seated properly.




Remove your device:

- a. Hold tablet on both sides and use thumbs to GENTLY push off the back cover.
- b. Proceed GENTLY to peel cover.
- c. Take tablet out.



Detaching keyboard:

The keyboard and back cover are designed to allow separation. They attach together magnetically.

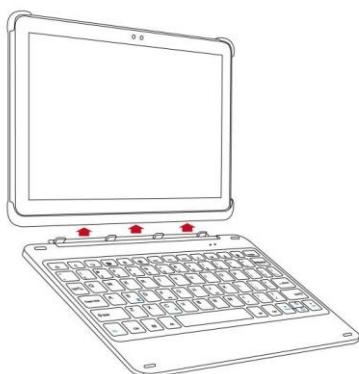

Pairing Steps

- Step 1. Switch On/Off to On to turn your keyboard on.
- Step 2. Press the “Fn + C” keys together to enter pairing mode.
- Step 3. Verify your device’s Bluetooth® settings are on.
Select Settings - Bluetooth - On.
- Step 4. Select “Pair new device”.
- Step 5. Select “Fintie Keyboard” from your device’s list of available devices to complete pairing.
- Step 6. Select “Fintie Keyboard”, the Bluetooth pairing indicator will turn off after successfully paired.

Sleep Mode

The keyboard will enter sleep mode after being idle for 30 minutes.

To activate it, press any key and wait for 3 seconds.

Charging your keyboard

1. Plug the Type-C end of the charging cable into the keyboard and the other USB end into your preferred USB charger. (USB charger is not included.)
2. When charging, the power indicator will turn red. Generally, it takes approximately 4 hours for a full charge. (Output: DC 5V/500mA.)


Package Contents

- 1 x Keyboard Case
- 1 x USB-C Charging Cable
- 1 x User Manual

Specifications

Bluetooth Version	BLE 5.0
Operating Range	Up to 10 meters
Working Voltage	3.0-4.2V
Working Current	1mA
Charging Current	200mA
Sleeping Current	0.01mA
Re-connect Time	3 seconds
Reworking Time	2 seconds
Stand-by Time	365 days
Charge Time	≤ 4 hours
Uninterrupted Work Time	400 hours
Lithium Battery Capacity	500 mAh

Product Overview

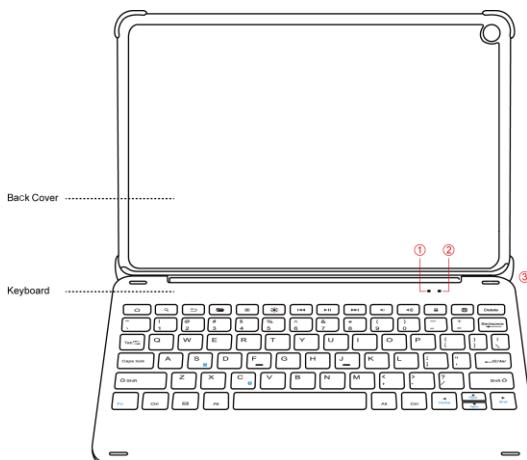

① Power indicator: Turns blue for 3 seconds.

Bluetooth indicator: Flashes blue when pressing “Fn + C”.

Caps Lock indicator: Blue light is on.

② Charging indicator: Red while charging.
Green when fully charged.

Low battery indicator: Flashes red when charging is required.

③ Charging port: Only used for charging.

Keys and Function

	Home		Search for		Back
	Open file folder		Brightness -		Brightness +
	Previous track		Play/Pause		Next track
	Volume -		Volume +		Lock screen
	Open silk		Email		Split Screen

Troubleshooting

If your device doesn't respond to the keyboard, try the follow steps.

1. Restart your device.
2. Turn your keyboard off and back on.
3. Forget and re-pair your keyboard.
4. If your keyboard doesn't establish or maintain a Bluetooth connection, reset the Bluetooth module by charging your keyboard.
5. After charging, if your keyboard doesn't operate correctly, please contact your authorized retailer.

Safety Tips

- Do not place heavy objects on the keyboard.
- Do not dissemble the product.
- Keep the product away from oils, chemicals, and organic liquids.
- Use only a damp, soft cloth, like microfiber, to wipe the keyboard.
- Dispose of battery according to local laws.
- Keep away from sharp objects.

***** For UK customers only *****

Recycling your old electricals is easy!

Recycle your electrical and electronic devices free at your local recycling centre. To find your nearest centre, visit www.recycle-more.co.uk and type in your postcode.

Why recycle?

Unwanted electrical equipment is the UK's fastest growing type of waste. Many electrical items can be repaired or recycled, saving natural resources and the environment. If you do not recycle electrical equipment will end up in landfill where hazardous substances will leak out and cause soil and water contamination—harming wildlife and also human health.

We're proud to support your local authority in providing local recycling facilities for electrical equipment.

To remind you that old electrical equipment can be recycled, it is now marked with the crossed-out wheeled bin symbol. Please do not throw any electrical equipment (including those marked with this symbol) in your bin.



What is WEEE?

The Waste Electrical or Electronic Equipment (WEEE) Directive requires countries to maximize separate collection and environmentally friendly processing of these items.

How are we helping?

In the UK, distributors including retailers must provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge. As a responsible retailer, we have met the requirements placed on us by financially supporting the national network of WEEE recycling centers established by local authorities. This is achieved through membership of the national Distributor Take-back scheme (DTS).

To find more information on WEEE recycling and to locate your nearest recycling centre please visit www.recycle-more.co.uk.

IC Caution:

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Contact Us

Website: www.fintie.com

Email: support@fintie.com

North America

Tel: 1-888-249-8201

(Monday-Friday: 9:00 AM – 5:00 PM EST)

Europe

Tel: +49 69 95094777

(Monday-Friday: 9:00 AM – 5:00 PM CET)

