


MEET YOUR FIRE 7 KIDS



ACTIVATE YOUR FIRE 7 KIDS



REMOVE THE CASE IF NEEDED

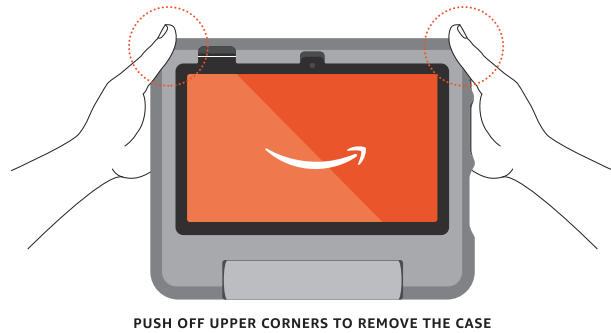

CLEAN YOUR TABLET



Remove the case and clean with a dry, nonabrasive cloth.

EXPAND YOUR STORAGE



Remove the case to install a microSD card. *microSD card sold separately.*

ENJOY YOUR FIRE 7 KIDS

