



## MEET YOUR FIRE HD 8 PLUS

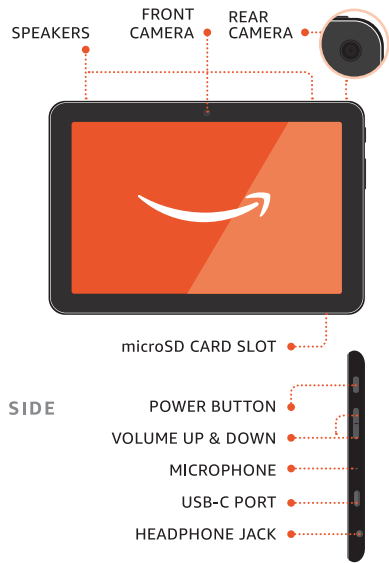

Also included: USB-C cable, power adapter

## ACTIVATE YOUR FIRE HD 8 PLUS

- 1 POWER**  
Power on your tablet.
- 2 SETUP**  
Follow the on-screen instructions to complete setup.

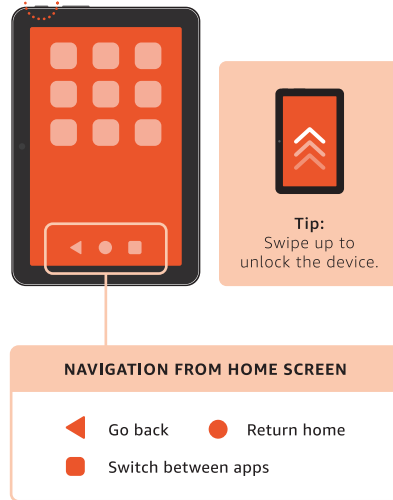

## EXPLORE YOUR FIRE HD 8 PLUS

### TO ACCESS SETTINGS AND SHORTCUTS



Swipe down for settings and quick controls.  
Swipe left for libraries.  
Swipe right for books, TV shows, movies, games, and other content.

### EXPAND YOUR STORAGE



Install microSD for up to 1TB of additional storage.  
*microSD card sold separately.*

## CHARGE YOUR FIRE HD 8 PLUS

### OPTION 1: CONNECT YOUR CHARGING CABLE



USB-A  
Adapter side

USB-C  
Tablet side

### OPTION 2: WIRELESS CHARGING



*Device (with compatible cover) should be in direct contact with wireless charging stand. Wireless charging stand sold separately.*



### TROUBLESHOOTING

For troubleshooting tips and Amazon Customer Service, visit [www.amazon.com/devicesupport](https://www.amazon.com/devicesupport).