


# getting to know your Fire HD 7

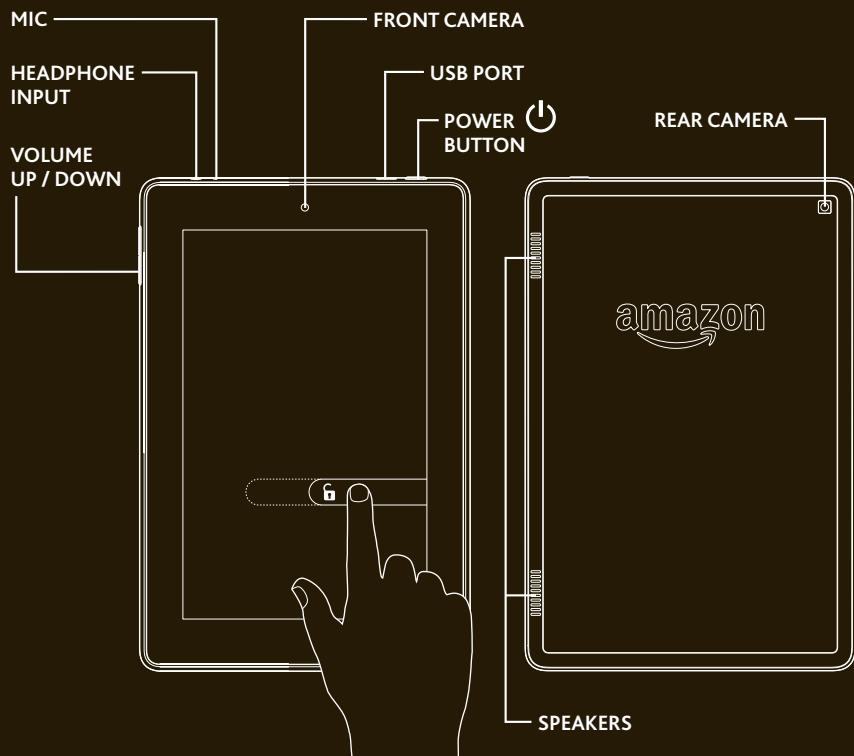

Getting started takes just a few easy steps:

- Turn on your Fire HD 7 by pressing the power button located on the top.
- Unlock the screen by pressing and dragging the lock icon to the left side of the screen.
- Charge the battery by connecting the included USB cable, and then connecting the other end of the cable to the included Fire HD 7 power adapter.

For Fire HD 7 customer support, visit [www.amazon.com/devicesupport](http://www.amazon.com/devicesupport)

## important product information

Safety, compliance, recycling, and other important information regarding your Fire HD 7 can be found in the Legal & Compliance section of the Settings menu on your Fire HD 7.

## Amazon terms & policies

Before using the Fire HD 7 device, please read the terms located at [www.amazon.com/devicesupport](http://www.amazon.com/devicesupport) and all rules and policies for the Fire HD 7 device and services related to the device (including, but not limited to, the Amazon privacy notice located at [www.amazon.com/privacy](http://www.amazon.com/privacy) and any rules or usage provisions accessible through the [www.amazon.com](http://www.amazon.com) website or the Amazon services on your Fire HD 7) (collectively, the "Agreements"). By using the Fire HD 7 device you agree to be bound by the terms of the Agreements.

Your Fire HD 7 is covered by a Limited Warranty. Details are available at [www.amazon.com/devicesupport](http://www.amazon.com/devicesupport).

© 2014 Amazon.com, Inc. or its affiliates. All rights reserved. Amazon, the Amazon logo and Fire are trademarks of Amazon.com, Inc. or its affiliates.

