



MEET YOUR FIRE HD 8

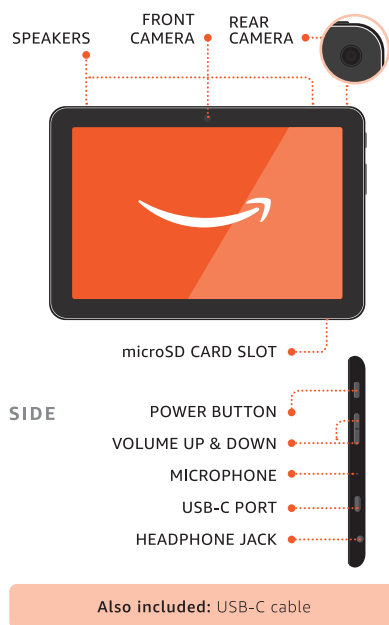

ACTIVATE YOUR FIRE HD 8

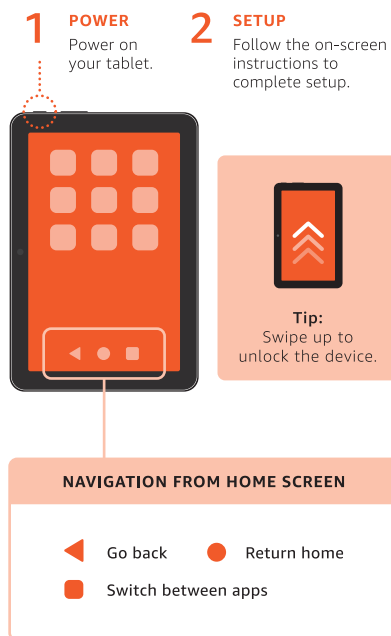

EXPLORE YOUR FIRE HD 8

TO ACCESS SETTINGS AND SHORTCUTS




Swipe down for settings and quick controls.

Swipe right for films, TV programmes, games, books, your library and other content.

EXPAND YOUR STORAGE

Install microSD for up to 1 TB of additional storage.
microSD card sold separately.

CHARGE YOUR FIRE HD 8

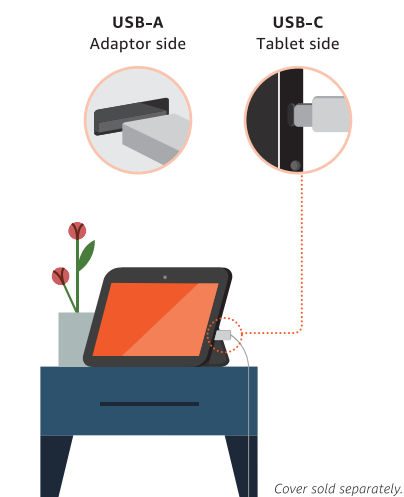

TROUBLESHOOTING

For troubleshooting tips and Amazon Customer Service, visit www.amazon.com/devicesupport.


LERNE DEIN FIRE HD 8-TABLET KENNEN



Im Lieferumfang enthalten: USB-C-Kabel

AKTIVIERE DEIN FIRE HD 8-TABLET

- 1 EIN/AUS**
Schalte dein Tablet ein.
- 2 EINRICHTUNG**
Folge den Anleitungen auf dem Bildschirm, um die Einrichtung abzuschließen.

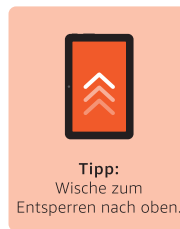

NAVIGATION AUF DEM STARTBILDSCHIRM

- ◀ Zurück
- Startbildschirm
- App-Wechsel

NAVIGATION AUF DEM FIRE HD 8-TABLET

ZUGRIFF AUF EINSTELLUNGEN UND VERKNÜPFUNGEN



Wische für den Zugriff auf Einstellungen und Schnellsteuerungen **nach unten**.

Wische für den Zugriff auf Bücher, Serien, Filme, Spiele, Bibliotheken und andere Inhalte **nach rechts**.


SPEICHERERWEITERUNG



Mit einer microSD-Karte kannst du deinen Speicherplatz um bis zu 1 TB erweitern.
microSD-Karte separat erhältlich.

LADE DEIN FIRE HD 8-TABLET AUF

- USB-A**
Anschluss Seitenansicht
- USB-C**
Tablet Seitenansicht

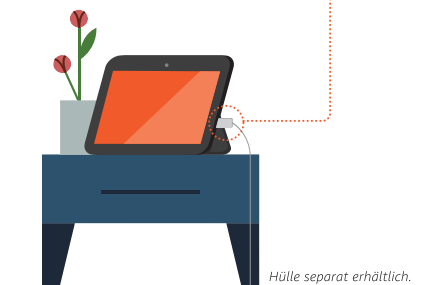

PROBLEMBEHEBUNG

Tipps zur Fehlerbehebung und Kontaktinformationen für den Amazon-Kundenservice findest du auf www.amazon.com/devicesupport.